



FLOOR TIE DOWN RINGS		
Part Number	# of Tie Down Rings included in Part Number	Purpose
BRNG1R4	4	Part numbers used to install 4 tie down rings per RKI Standard locations. (See Bulletin P3236)
BINSTRNG1R4		
BRNG1R6	6	Part numbers used to install 6 tie down rings per RKI Standard locations. (See Bulletin P3236)
BINSTRNG1R6		
BRNG1	1	Part Numbers used to install tie down rings in custom locations (See Bulletin P3236) BRNG1 used to ship loose tie down rings.
BINSTRNG1		


Tie Down Ring Placement

RKI Standard Location

- Customer orders RNG1R4 or RNG1R6 plus the appropriate installation part # (These part numbers are a set of 4 or 6 depending on which set is ordered so quantity of 1 per body is needed)
- RKI will install the tie down rings in standard locations as shown on bulletin P3236 for appropriate body CA

Custom Location

- Customer orders the number of RNG1 they need. (Sold individually not in sets)
- RKI will send the customer a sheet for customer to complete with their specific installation instructions. Sheet 3 of Bulletin P3236
- Customer returns Sheet 3 for RKI to process their order with custom placement.

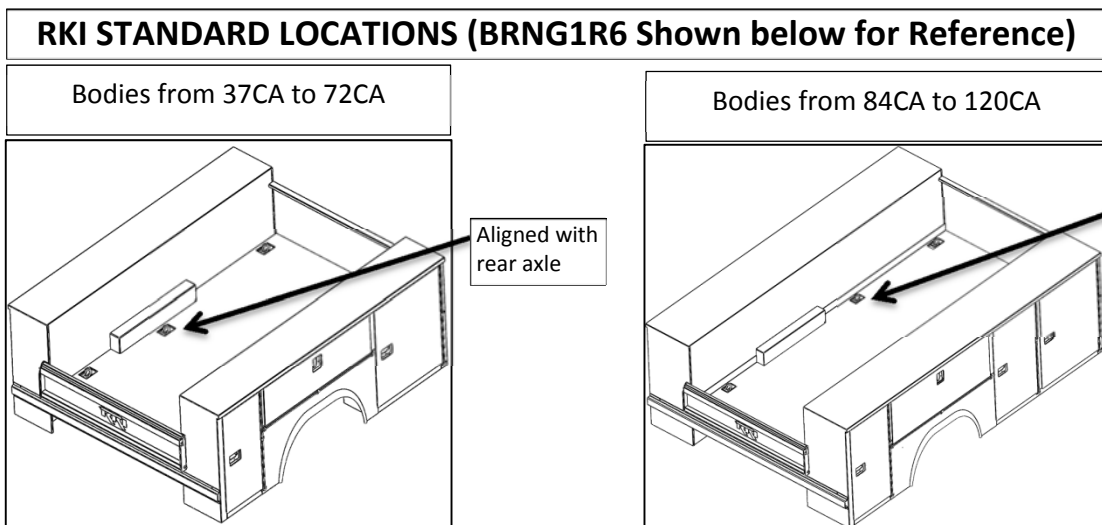

See [Bulletin P3236](#) for Detailed Dimensions
in the Service Body Installation Instruction Section